



## Major Treatment Processes and Types of Residual Solids Treatment Processes (Robinson and Witko, 1991)

Coagulation/Filtration			
Typical Residual Waste Streams Generated	Typical Contaminant Categories	Typical Disposal Methods	Regulation Covering Disposal Method
Aluminum hydroxide, ferric hydroxide, or polyaluminum chloride sludge with raw water suspended solids, polymer and natural organic matter (sedimentation basin residuals)	Metals, suspended solids, organics, radionuclides, biological, inorganics	Landfilling  Disposal to sanitary sewer/WWTP  Land application  Surface discharge	RCRA/CERCLA  State and local regulations  RCRA, DOT  NPDES (CWA), state and local DOH
Spent backwash filter-to-waste	Metals, organics, suspended solids, biological, radionuclides, inorganics	Recycle  Surface discharge (pumping, disinfection, dechlorination)  Disposal to sanitary sewer/WWTP	State and local DOH  NPDES (CWA), state and local regulations  State and local regulations

Precipitative Softening			
Calcium carbonate and magnesium hydroxide sludge with raw water suspended solids and natural organic matter	Metals, suspended solids, organics, unreacted lime, radionuclides	Landfilling  Disposal to sanitary sewer/WWTP  Land application	RCRA/CERCLA, state and local regulations  State and local regulations  RCRA, state and local regulations, DOT
Spent backwash filter-to-waste	Metals, organics, suspended solids, biological, radionuclides, inorganics	Recycle  Surface Discharge (pumping, disinfection, dechlorination)  Disposal to sanitary sewer/WWTP	State and local DOH  NPDES (CWA), state and local regulations  State and local regulations

Membrane Separation			
Reject streams containing raw water suspended solids (microfiltration), raw water natural organics (nanofiltration), and brine (hyperfiltration, RO)	Metals, radionuclides, TDS, high molecular weight contaminants, nitrates	Surface discharge (pumping, etc.)  Deep well injection  Discharge to sanitary sewer/WWTP  Radioactive storage	RCRA, NPDES, state and local regulations  RCRA, NPDES, state and local regulations  State and local regulations  RCRA, DOT, DOE

## Ion Exchange

	Typical Contaminant Categories	Typical Disposal Methods	Regulation Covering Disposal Method
Brine stream	Metals, TDS, hardness nitrates	Surface discharge	RCRA, NPDES, state and local regulations
		Evaporation ponds	RCRA, NPDES, state and local regulations
		Discharge to sanitary sewer/WWTP	State and local regulations

## Granular Activated Carbon

Spent GAC requiring disposal and/or reactivation, spent backwash, and gas-phase emissions in reactivation systems	VOCs, SOCs (nonvolatile pesticides), radionuclides, heavy metals	Landfill	RCRA, CERCLA, DOT
		Regeneration (on/off site)	State and local air quality regulations (CAA)
		Incineration	State and local air quality regulations (CAA)
		Radioactive storage Return spent GAC to supplier	DOT, DOE

## Stripping Process (mechanical or packed tower)

Gas phase emissions	VOCs, SOCs, radon	Discharge to atmosphere GAC adsorption of off-gas (contaminant type and concentration dependent)	State and local air quality regulations (CAA)
Spent GAC if used for gas-phase control	VOCs, SOCs radionuclides	GAC adsorption of off-gas (contaminant type and concentration dependent) Return spent to GAC to supplier	State and local air quality regulations (CAA)

### Chart Key

CAA =Clean Air Act	NPDES =National Pollutant Discharge Elimination System
CWA =Clean Water Act	RCRA =Resource Conservation and Recovery Act
CERCLA =Comprehensive Environmental Response, Compensation and Liability Act	RO =Reverse Osmosis
DOE =Department of Energy	SOC =Synthetic Organic Chemical
DOH =Department of Health	TDS =Total Dissolved Solids
DOT =Department of Transportation	VOC =Volatile Organic Compound
GAC =Granular Activated Carbon	WWTP =Wastewater Treatment Plant

ardous or radioactive waste. Depending on the raw water quality and treatment process removal efficiency, hazardous or radioactive characteristics could be exhibited in potentially any residual waste stream mentioned on page 1.

**What regulations govern management of water treatment plant residuals?**

Identifying the regulations that affect various management practices may be difficult for water treatment utility managers. The difficulty is due to the many different types of wastes produced by WTPs and various types of waste disposal: direct discharge, discharge to wastewater treatment plants, disposal in landfills, land application, underground injection, disposal of radioactive waste, and treatment of air emissions.

At the federal level, the U.S. Environmental Protection Agency (EPA) has not established any regulations that are specifically directed at WTP residuals. Applicable regulations are those associated with the Clean Water Act (CWA); Criteria for Classification of Solid Waste Disposal Facilities and Practices (40 CFR, Part 257); the Resource Conservation and Recovery Act (RCRA); the Comprehensive Environmental Response, Compensation, and Liability Act (CERCLA) or Superfund; and the Clean Air Act (CAA). The CWA limits direct discharges into a water course while the other legislation governs other methods of use and/or disposal of wastes. Most states are responsible for establishing and administering regulations that will meet the requirements of these acts. The regulation of wastes, therefore, is the responsibility of the states.

**How are residuals management plans selected?**

To develop a residuals management plan, the WTP manager may start with a broad array of residuals processing and disposal options that

can be narrowed through considering specific residuals characteristics and associated regulatory requirements. A focus on available disposal options further narrows the management alternatives.

Figure 1 illustrates the need for practical disposal options and treatment processes that will take into account economic and noneconomic factors of concerns to the community. The technical criteria used to select the final management plan differ from user to user; economic, cultural, social, and environmental factors are also site-specific, and are typically included in any final selection.


**Where can I find more information?**

Information in this fact sheet was primarily obtained from:

- (1) Management of Water Treatment Plant Residuals. American Society of Civil Engineers (ASCE) Manuals and Reports on Engineering Practice No. 88, American Water Works Association (AWWA) Technology Transfer Handbook, and U.S. EPA 625/R-95/008.
- (2) Handbook of Practice: Water Treatment Plant Waste Management. American Water Works Association (1987). [This book is out of print but available in libraries.]
- (3) Robinson, M.P., and J.B. Wiko. 1991. "Overview of Issues and Current State-of-the Art Water Treatment Plant Waste Management Programs." 1991 Annual Conference Proceedings. AWWA Quality for the New Decade, Philadelphia, PA. June 23–27. [This book is out of print; however, copies of the article are available for a fee from AWWA.]

Management of Water Treatment Plant Residuals can be ordered from the AWWA. For more information, write the AWWA at 6666 W. Quincy Ave., Denver, CO 80235, or call (800) 926-7337. You may also view a selection of AWWA literature on their Web site at [www.awwa.org/store.htm](http://www.awwa.org/store.htm).

**Figure 1** The primary target of a residuals management plan

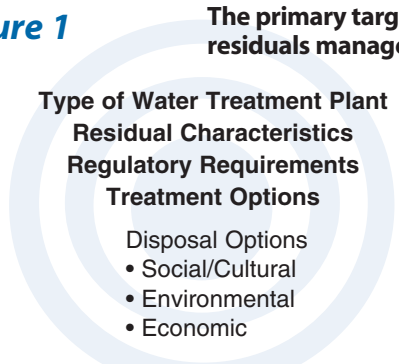

Source: Management of Water Plant Residuals



An Equal Opportunity/Affirmative Action